

## FITTING THE STRAP



Attach strap (F) to both sides of part (B) using the press studs.



Repeat this process with the other strap (F) on to both sides of part (A).



Connect main strap (G) to straps (F) with both clips on either side of the front of the scope.



Repeat this process at the rear of the scope.

Need more help? Scan the QR code opposite or visit our Youtube channel for an instructional video.



Receive the latest Kowa sporting optics news and offers first - sign up [www.kowasnextbigthing.com](http://www.kowasnextbigthing.com)

**Kowa Optical Products Co., Ltd.**  
4th Fl., Toko Bldg, 4-11-1,  
Nihonbashi-Honcho  
Chuo-Ku, Tokyo 103-0023 | Japan

T: +81-3-5651-7061  
[info@kowa-PROMINAR.com](mailto:info@kowa-PROMINAR.com)  
[www.kowa-PROMINAR.com](http://www.kowa-PROMINAR.com)

**Kowa Optimed Deutschland GmbH**  
Bendemannstr. 9,  
40210 Duesseldorf | Germany

T: +49 (0) 211-542184-00  
[scope@kowaoptimed.com](mailto:scope@kowaoptimed.com)  
[www.kowaproducts.com](http://www.kowaproducts.com)

**Kowa American Corporation**  
20001 South Vermont Avenue,  
Torrance, CA 90502 | U.S.A.

T: +1 (800) 966-5692  
[customerservice@kowa.com](mailto:customerservice@kowa.com)  
[www.kowa-usa.com](http://www.kowa-usa.com)



## C-880N STAY-ON-CASE



## FITTING INSTRUCTIONS

## CASE PARTS



## OBJECTIVE LENS CAP STORAGE



The objective lens hood (D) includes a useful objective lens cap holder. This holder is designed to hold the objective lens cap when the scope is in use. (FIG 1) **CAUTION:** Always remove the objective lens cap from the holder and secure it back on to the scope body when transporting your scope and the objective lens hood is attached to the main body of the case. (FIG 2)



Wrap part (A) around the barrel of the scope.



Secure part (A) using the three press studs on the under side of the scope.



Slide part (B) over the eyepiece and fit it onto the scope body.



Connect parts (A) and (B) using part (C).



Secure with press-studs on both sides.




Slide on the objective lens hood (D).



Secure with the press-studs on the top and bottom of part (A).



Slide the eyepiece cap (E) over the eyepieces.

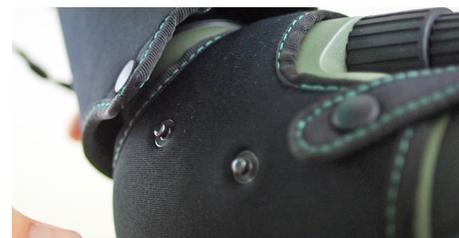

Secure on to both sides of part (B) using the press studs.



Secure the stay-on-tab to part (B) using the press stud.